


How to Measure Slope Blackout Zebra Shades

How To Measure For Inside Mount Zebra Blinds

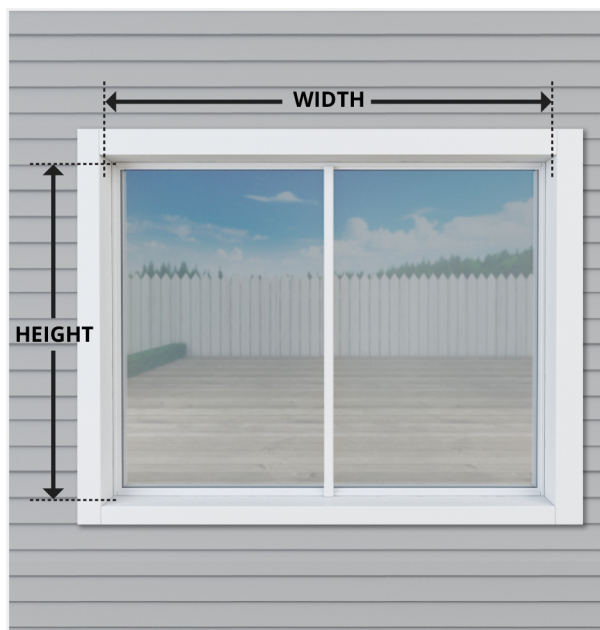


Inside mount zebra blinds are installed inside the window frame or casing.

Steps:

1. Measure the depth from the window casing to the glass pane. Make sure your window recess meets the minimum depth requirement for an inside mount.
2. Measure the inside width of the window casing in three places. Record the narrowest measurement.
3. Measure the inside height from the top of the window casing in three places: left, centre, and right. Record the tallest measurement.

How To Measure For Outside Mount Zebra Blinds

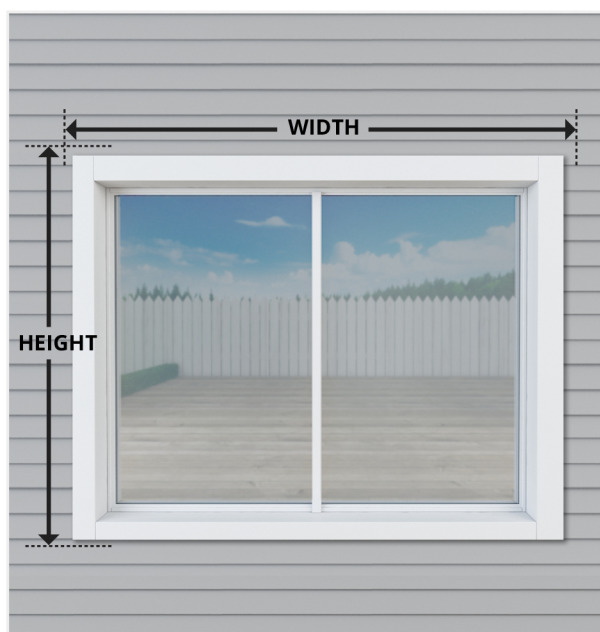

To measure for face fitting blinds measure the outside width of the window frame.

Steps:

1. Measure the width across the top outer edges of the architrave where the brackets will be fitted.
2. Next, measure the hard drop from the top outside edge of the architrave to the bottom outside edge of the architrave. The length may be increased if you want the blind to drop past the bottom of your window frame.
3. To determine the width of the roller shades make sure there is enough flat surface for mounting hardware.
4. If your window has no trim, add 2-3 inches on each side and measure the width between them in a straight line.

Note:

- For accurate measurements, only use steel tape.
- Follow the width by height format (H x W) for measurements.