

SAFETY NET POOL COVER INSTALLATION GUIDE (CONCRETE DECK)


STEP 1: MARK ANCHOR POINTS



A. Place the safety net over the pool as per above image.



B. Mark the anchor points on the concrete deck, at proportionate distance approx. 30.5 cm.

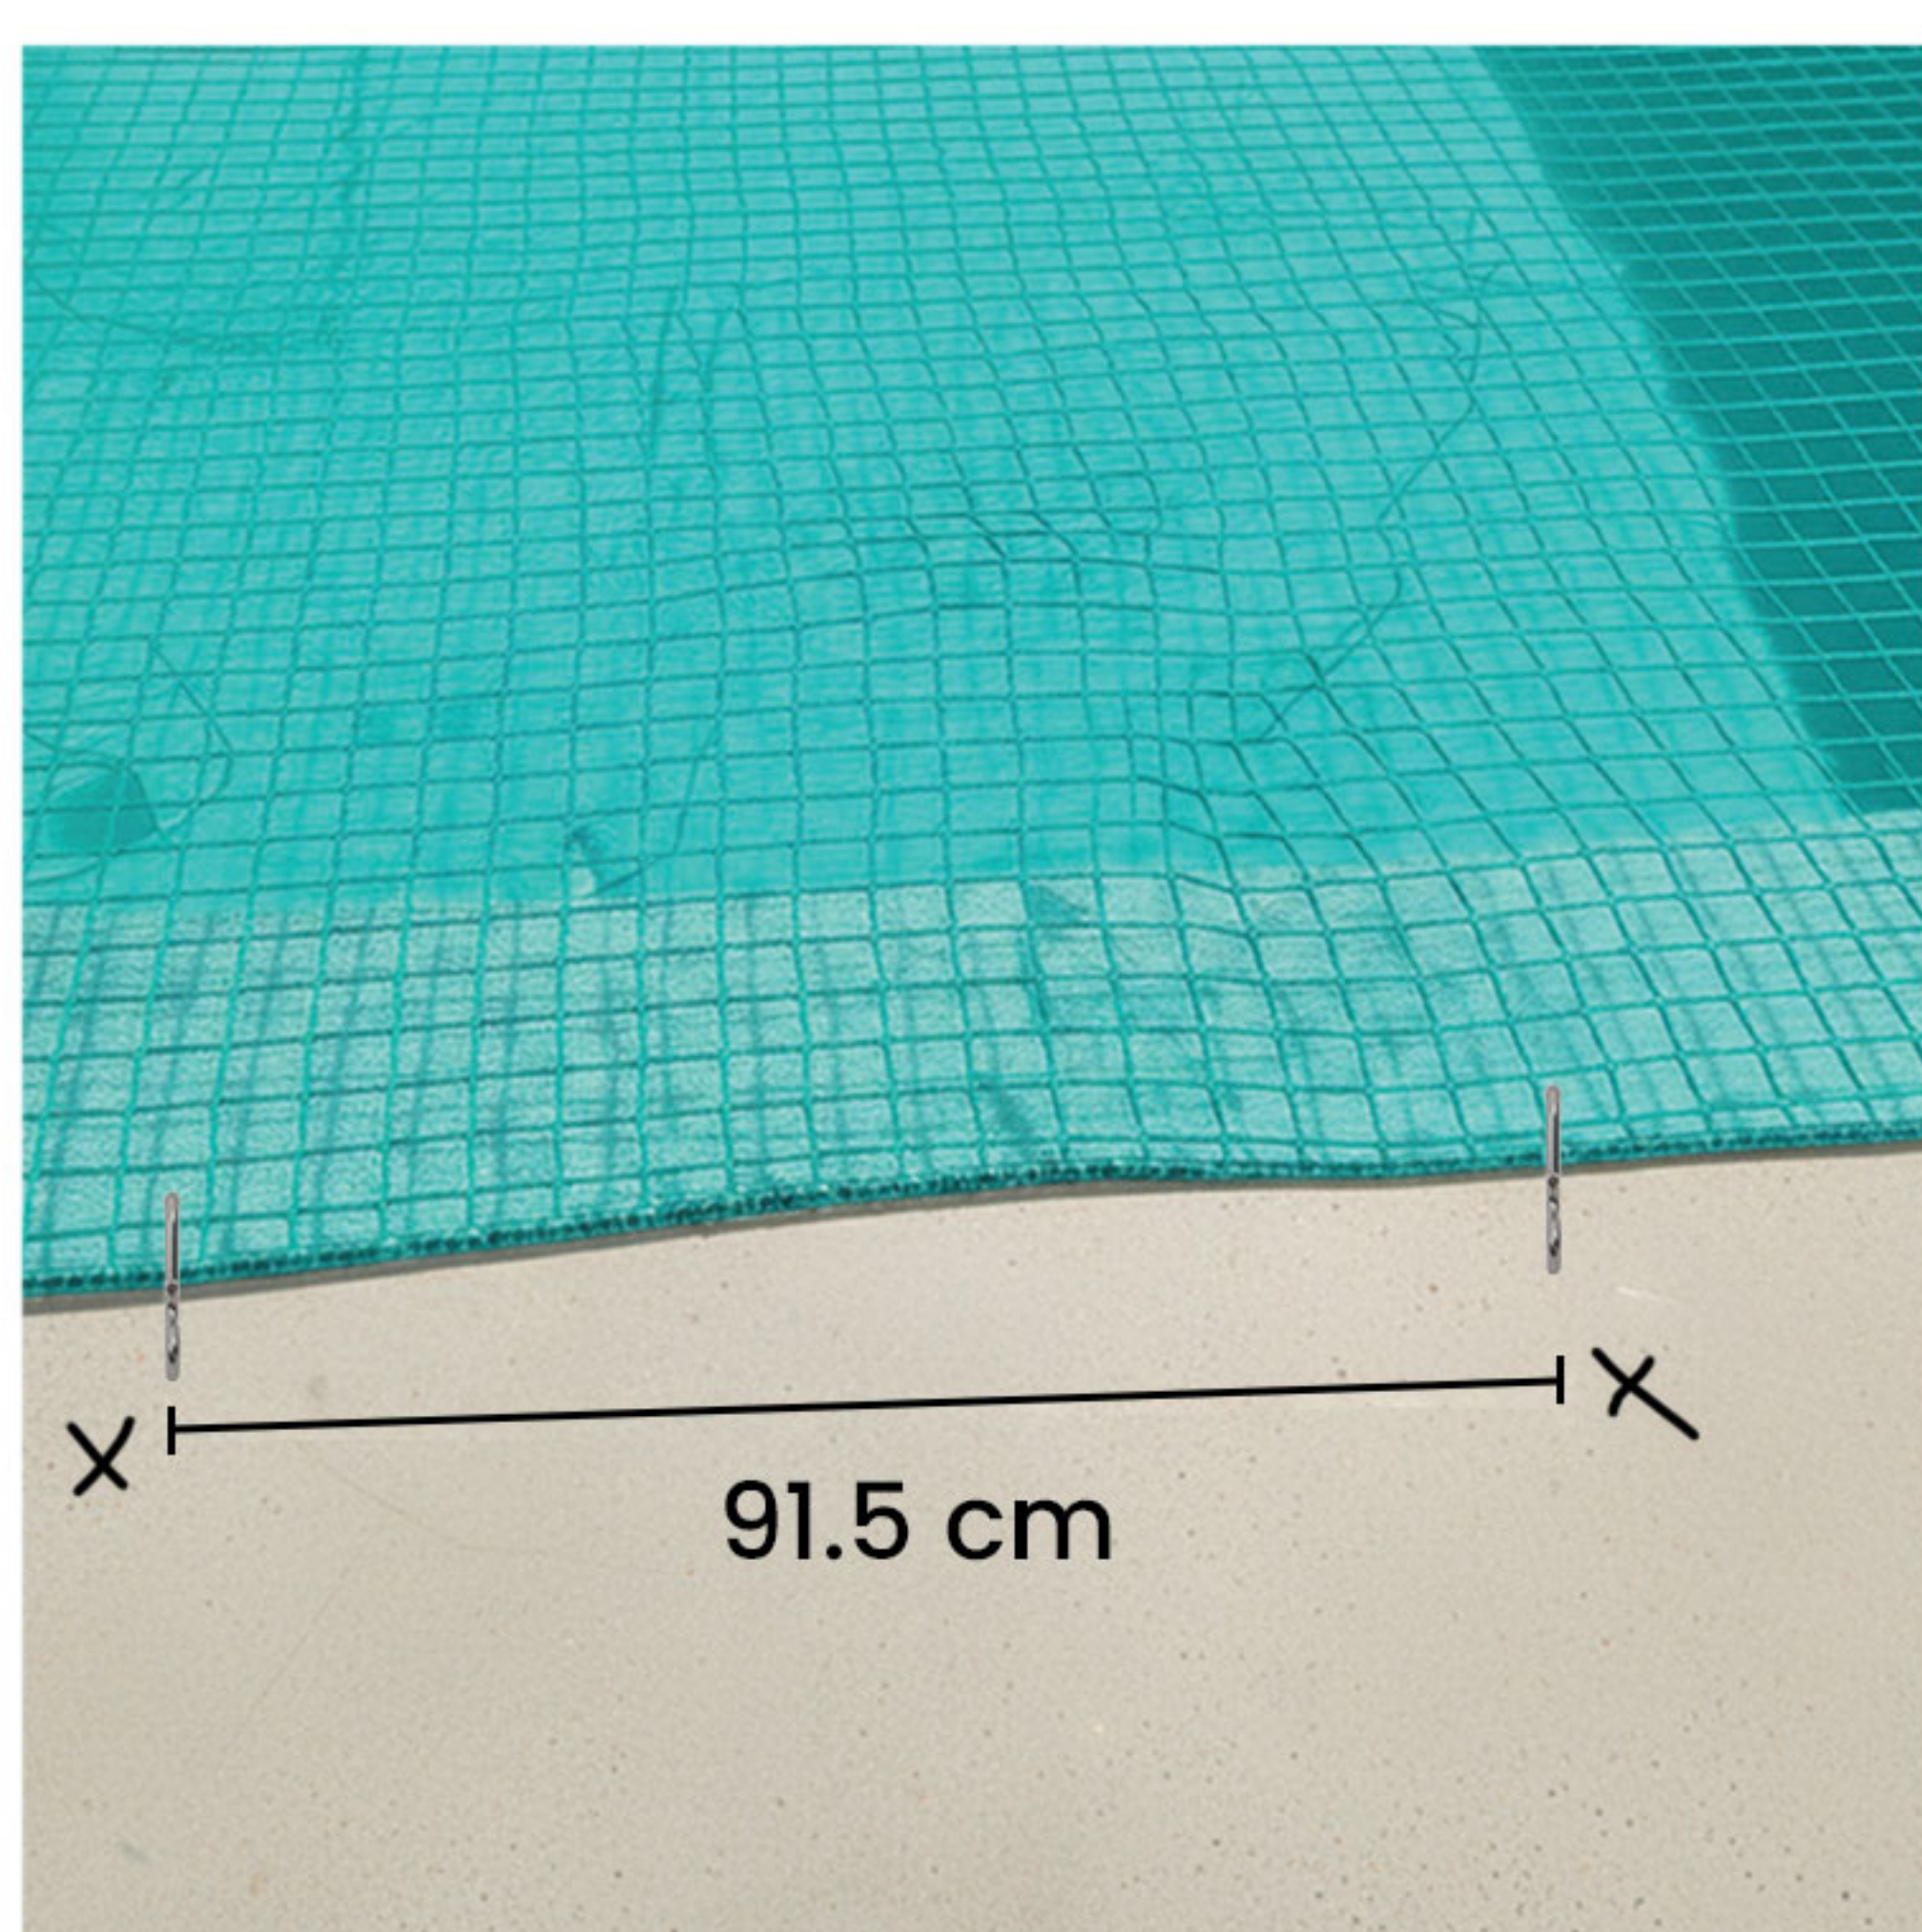


C. Align the marks in a straight, parallel line with prefixed SS clip on net. (At an approximate distance of 91.5 cm between each anchor point).

STEP 2: DRILL HOLES



A. Drill holes vertically (as per anchor sleeve length) at each marked point by using a hammer drill with a 19 mm masonry bit (bit size as per anchor).

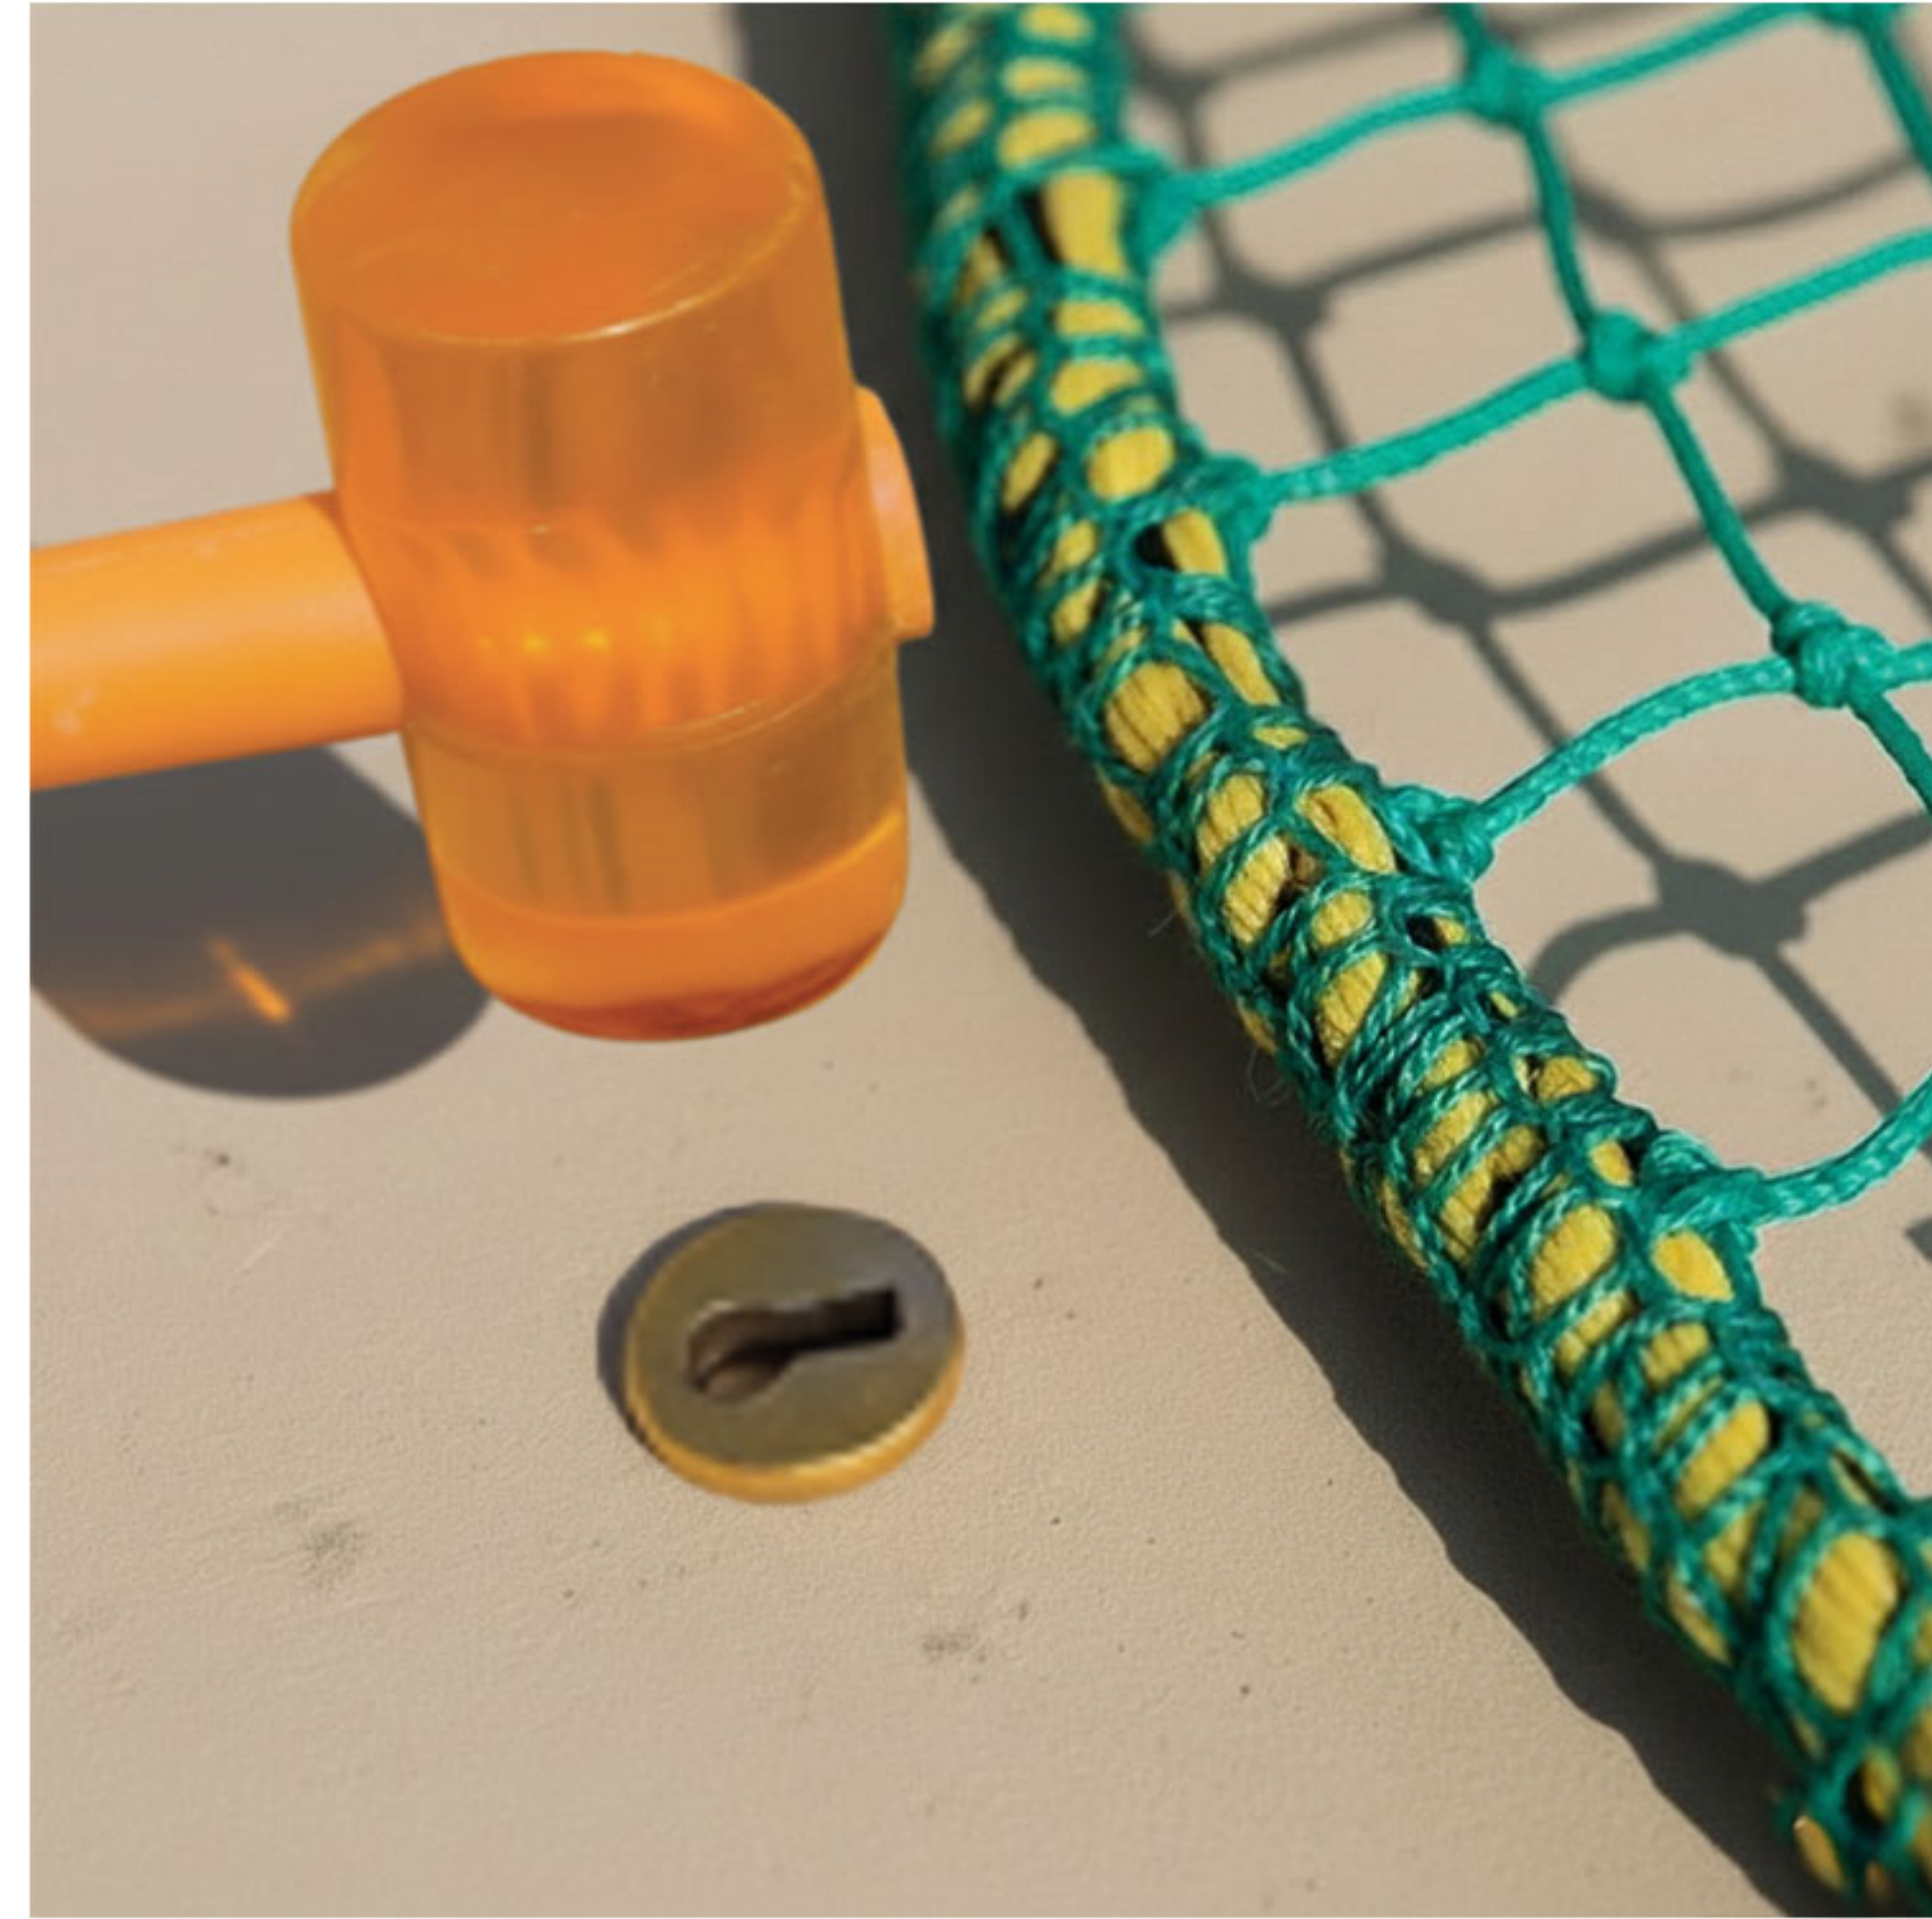

B. Fix the anchor into the hole.

STEP 3: FIX THE SS CLIP



A. Unscrew the brass anchor. Pull the safety net & insert the SS clip into the keyhole of the brass anchor.




B. Tighten the screw securely for maximum strength.



- c. Tap lightly with a rubber mallet to ensure the anchor sits flush with the deck surface.

STEP 4: TENSION AND ADJUST

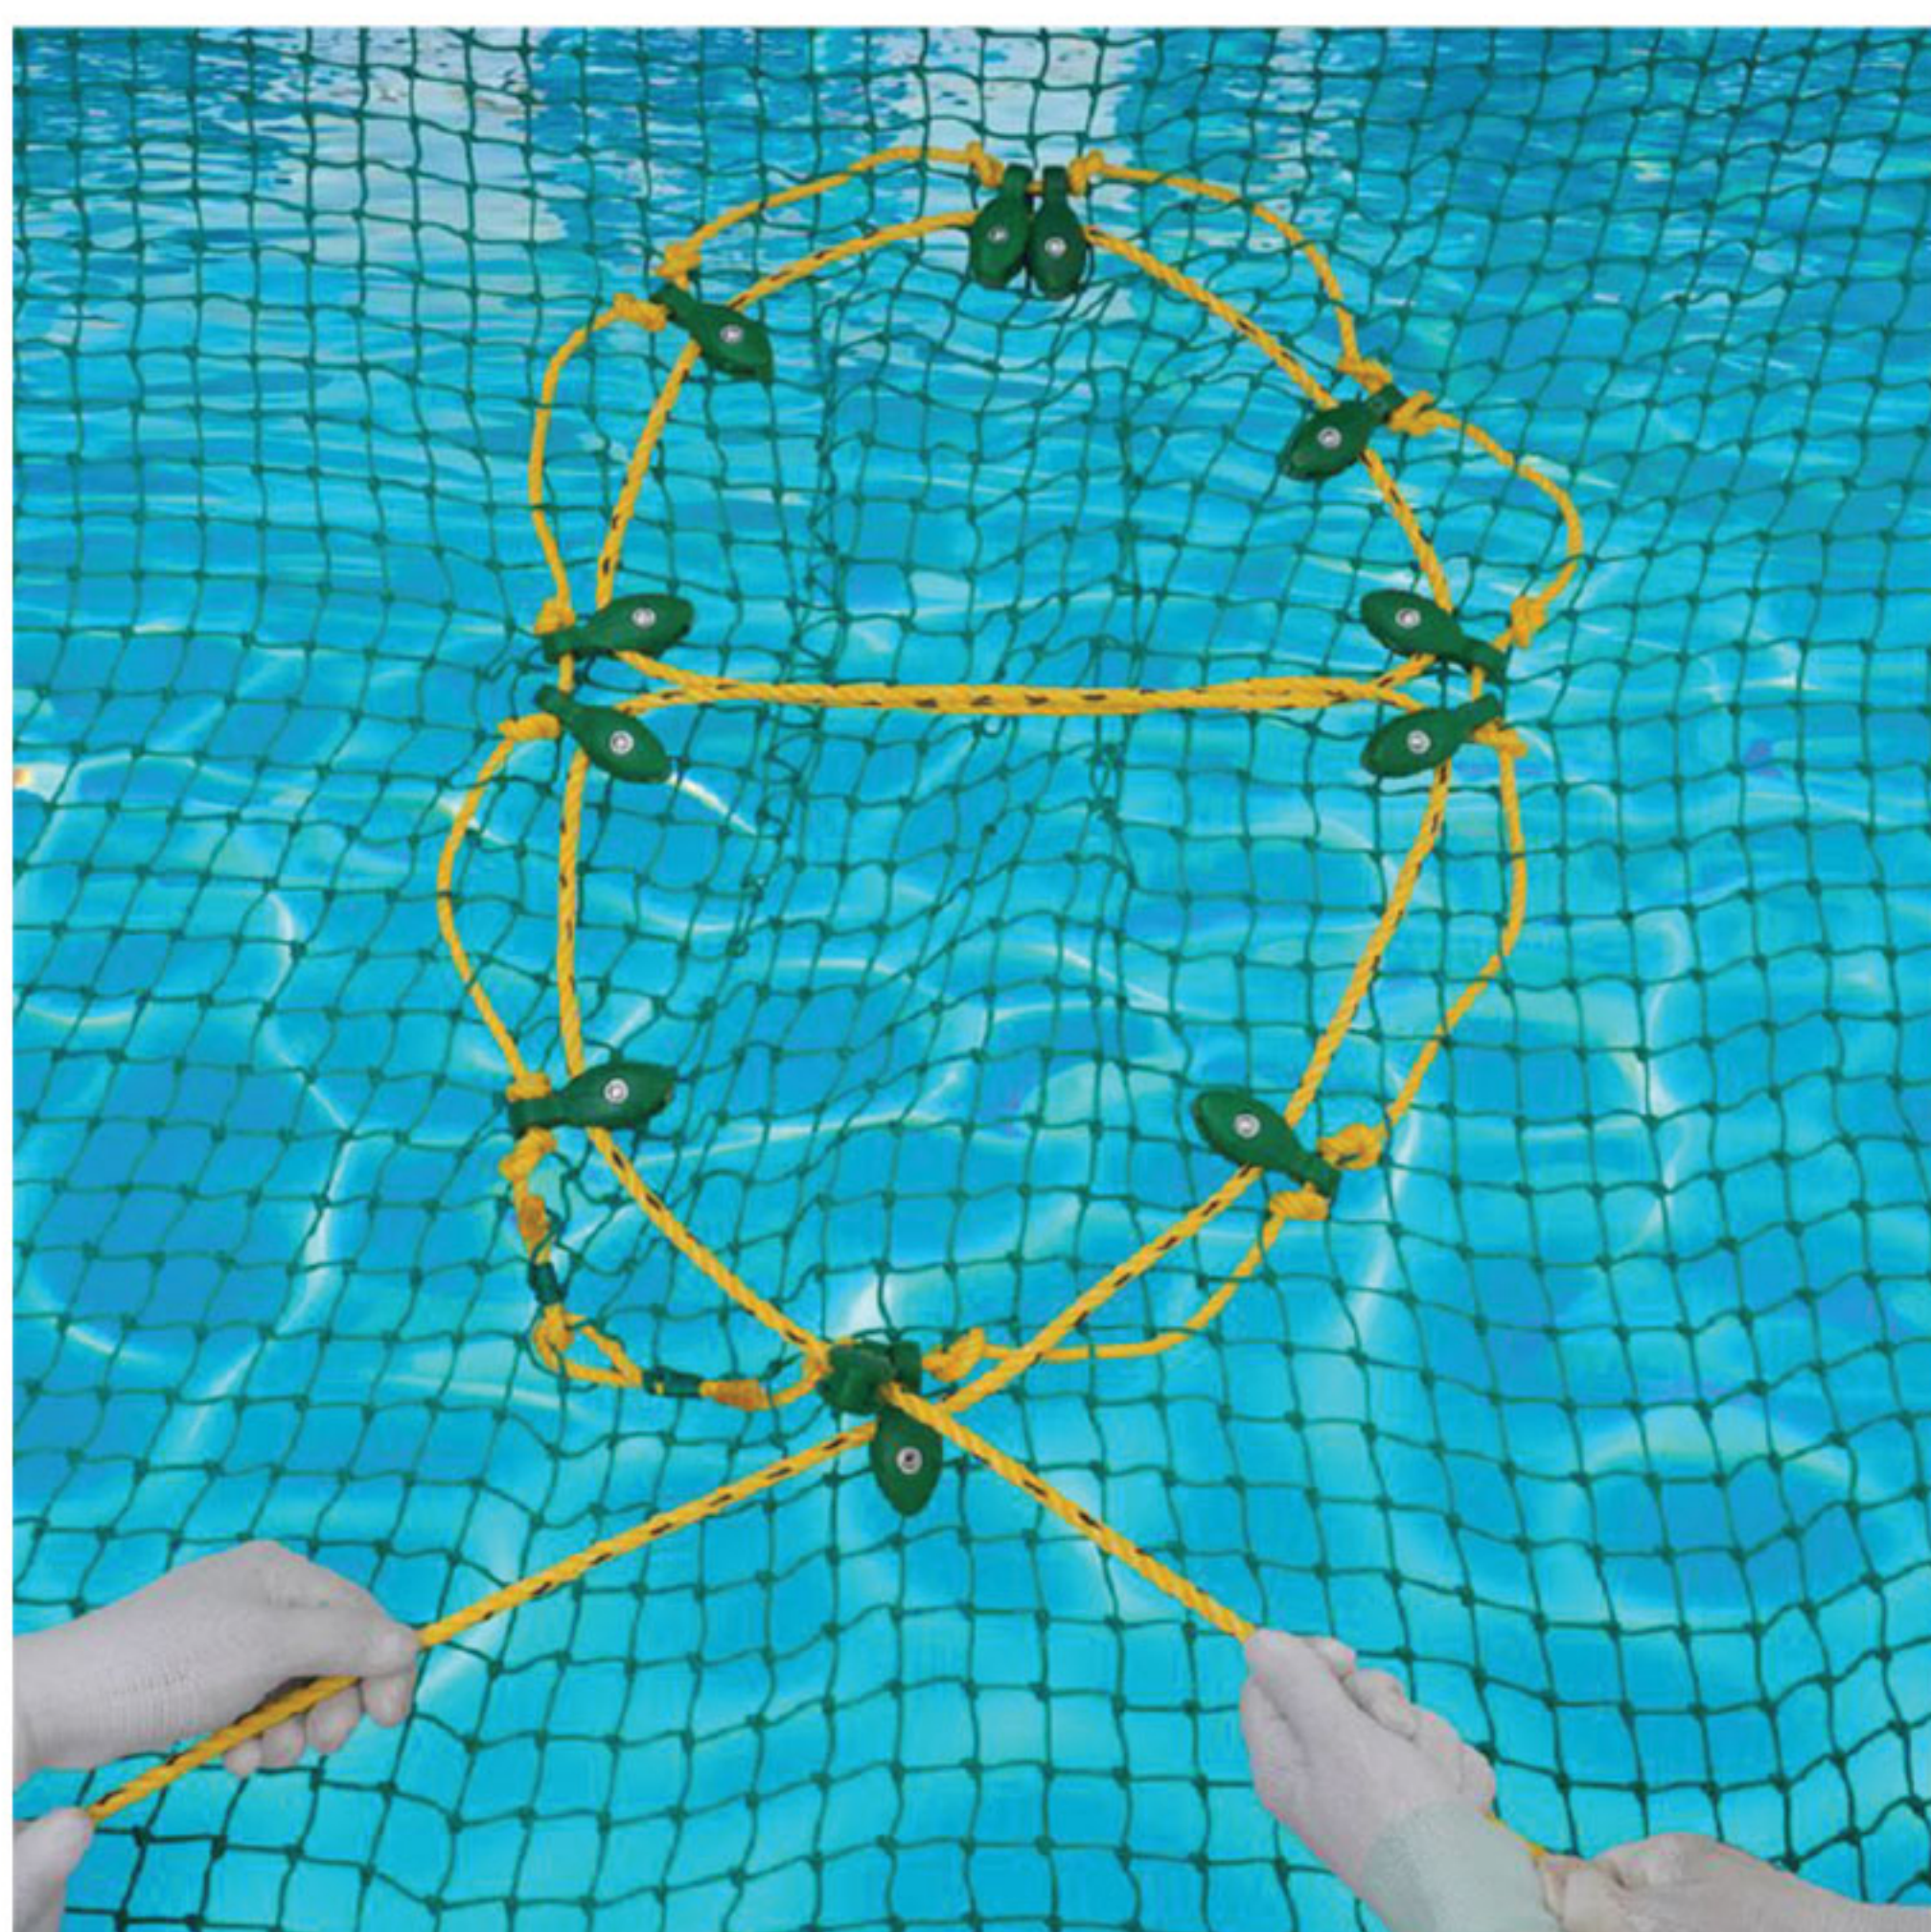


- A. Begin tightening the net from one corner and move evenly around the pool to maintain uniform tension.



- B. On the side where the rope tensioner will be installed, mark holes approximately 30.5 cm apart and install the rope tensioner anchors.



C. Attach the rope tensioner hook to the anchor hardware.

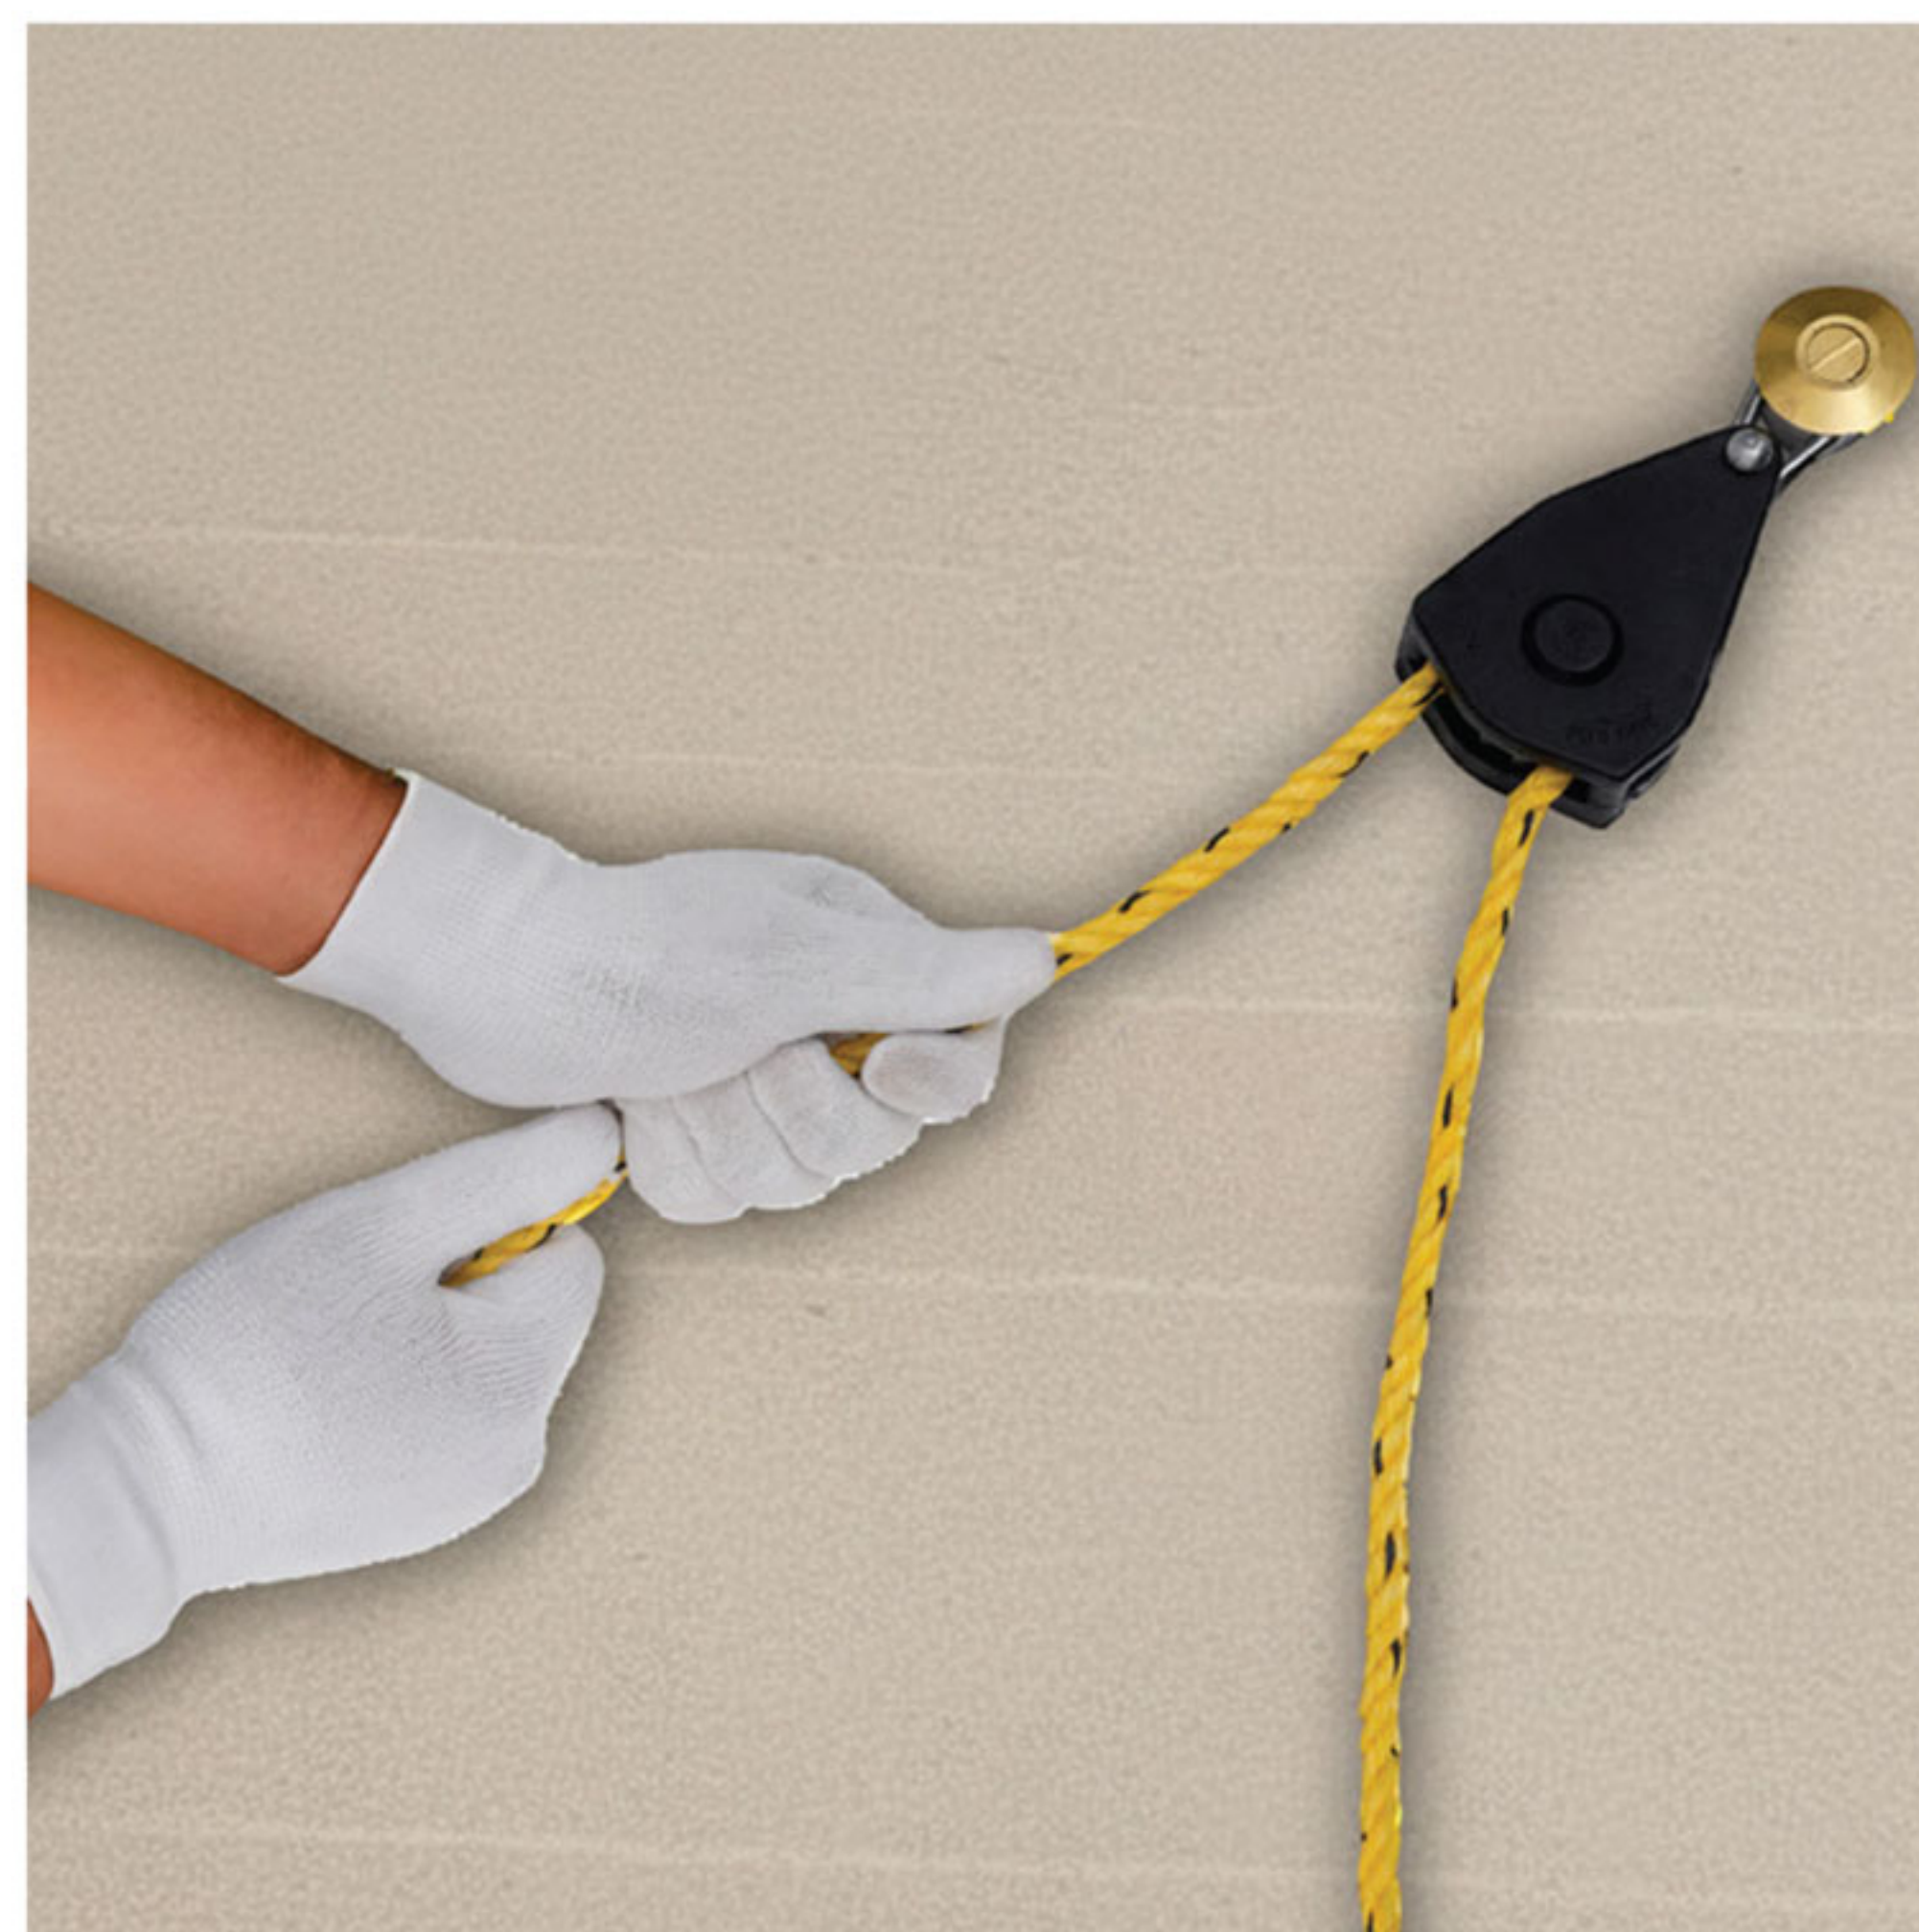

D. Secure the tensioner rope firmly by tightening the rope through the tensioner until the net is snug and even.

STEP 5: FINAL SAFETY CHECK

- Walk around the pool and inspect all anchor points and ensure all SS clips are pressed properly.
- Ensure all hooks, clips and tensioners are properly secured and safety net is tightened.
- Apply gentle downward pressure at the center of the net, it should remain firm without sagging.
- Ensure that the entire cover is evenly tensioned and safe for use.
- Walking or sitting is prohibited on the safety net.